BIITZWOIF

Product Legend

Description of key functions



Product Parameters

| Product Model:BW-JA | Measurement accuracy: ± 1.5PSI |
|------------------------------------|--|
| Charging Input voltage:5v 2A | Pressure unit:PSI,BAR,KPA,KG/CM ² |
| USB Output Voltage:5V == 2A | Length of outer gas tube:320MM±10M |
| Rafed voltage:14.8V | Working temperature: -20°C~60°C |
| LED Light:5W-10W | Product size:220*95*89mm |
| COB strlp lumen value:250LM for we | ak aear, 600LM for strong aear |

MAX Inflatable pressure:150PSI









Air pump instructions

Thisproductis suitable for

All kinds of cars (excluding trucks and engineering vehicles). motorcycles, electric cars, all kinds of bicycles, balls, balloons, life buovs, swimming rings, Intlatable mats, kayaks and other inflatable

This product for the need to inflate the parts of the automatic inflatable function, air pressure reaches the slandard value can automatically stop, intelligent settings, simple operation. This product is also a precision digital display air pressure measurement tool, any need to measure air pressure parts, can use this product for measurement,

This product is equipped with long-range LED lighting function and daily lighting function, which allows you to operate clearly in the dark environment without lights, without fear of darkness.

This product is set up with four pumping modes, "car", "motorcycle". "blovcle", "ball", you can choose the appropriate mode according to their own needs, each mode has a differental pressure defaultvalue. Fach made has a different alroressure default value. You do not need to set your own, of course, If these default values do not meet your needs, you can set your own air pressure value, pumping, and so on, when the air pressure reaches your set value, the pump will automatically stop, do not have to be on the sidelines to guard, you can do things while pumping, without delay.

Operating Instructions

Automobile\Motorcycle\Electric Vehicle\Bicycle Category

Connect the nozzle tube of the accessory to the air outlet hole of the pump and screw It tightly, fasten the nozzle to the air core of the tire and then fasten the pressure handle, press and hold 💮 to turn on the pump, then It will flash for a few times and then show the tire pressure value, make sure that the pumping made is correct and then press to start the pump to start pumping, and then It will stop by Itself when It reaches the set value.

when It reaches the set value

Balls/Swimming Rings/Air Cushions Connect the nozzletube of the accessory to the air outlet hole of the inflatable pump and screw it tightly, fasten the nozzle to the ball needle (or other two kinds of conversion nozzles) and then fasten the pressure handle, make sure that the pumping mode is correct and then press (5) to start pumping, and then it will stop by itself

The product offers four air pressure units for you to choose from

PSI.Bar.Kpa.Ka/cm²

Default tire pressure for each mode











2.1 2.2 2.5 Kg/cm²

Long press to turn on/off, short press to slart/stop Inflation after turning on, automatic shutdown after 1 minute unused

Mode switching

This product provides four inflatable modes for you to choose. It is convenient for you to switch to use in different places.

These four modes are: "car", "motorcycle", "bicycle", "bail" you can use the You can use the Mode button 🗇 to switch between the four modes, and the default value of the air pressure will be changed automatically after selection

You can switch using the unit key.

This product provides four pressure units for you to choose from. To facilitate the use of habits in your location, switch to use by yourself. These four units are: "PSI"," BAR", "KPA", kg/cm2"

Set value adjustment [+] [-] This product has a default air pressure value, but if you can not meet your needs, you can also manually adjust the air pressure value, press the 👍 🗀 key to Increase or decrease the number adjust to the value you want to walt 3 seconds to automatically set.

Atthis point, the air pump pressure setting value has changed to the

number you set At this time, pressthe (1) key to start the air pump.

LED Hahtina 🚭

This product is equipped with long-range LED lighting function and daily lighting function, so that you can operate clearly in a dim environment without lights, without fear of the night.

Press & the far spotlight is on, press 2 the far spotlight to switch SOS, Press 3 on the light with weak gear, 4 on the light with strong gear. Press 5 to turn off the LFD light, and then press 5 to turn off the LFD

Operating Instructions

- Light weight, easy to carry and stare. It is a road trip, outdoor activities, daily necessities.
- Multiple functions in one: tire pressure detection, air pump, night llahting. Flaht-fold protection for safe use
- Strong inflation capacity up to 150PSi. High precision tire pressure detection, 0.01 Kg/cm2.
- Wide range of high and low temperature operating temperature. -20°C ~ +60°C range.

Emergency starting power supply instructions

This product is sultable for 12V system vehicles How to start the car

Before using this product to start the car, it is necessary to charge the car, generally as long as mare than 75% can start the car. The positive and negative terminals of the matchina battery clip are connected with the positive and negative terminals of the car ballery. The red clip holds the positive end of the ballery, and the black clip holds the negative end of the battery. Then plug the battery clamp into the starting oullet of this product, and then turn the car key into the starting gear or press the car start button. After successful startup, unplug the product first, and then remove the battery clip from the car battery. If no, wait one minute and repeat the preceding steps-The operation process is as follows:

. the baltery clamp plug into the corresponding hole of this

2. Use the matchina clip to connect the car battery:

3. Start the car 4. Unplug the battery clamp from the product

5. Remove the clamp from the positive and negative terminals of

Precautions for emergency power start

before each start, please fully charge to ensure sufficient power (mare than 75%):

2. Fully insert the battery cable connector into the EC5 interface of the product: 3. the red clip fully clamp the positive (+) pole of the battery, the

black clip fully clamp the negative (-) pole of the battery (very 4. after the car starts, please unplug within 30 seconds, and then

b. do not start continuously, start time should not exceed 5 seconds.

Start unsuccessful interval of more than 1 minute to start the second time (do not start continuously, very important) 6. before starting the car, please turn off all electronic equipment in the car, such as: air conditioning, lights, entertainment system, etc.

Matters needing attention

This product is not allowed to be used by children alone, and children need to be accompanied by adults. Never inflate a trachea into the mouth, ears, nose, or eves of a human or animall

Do not use this product as a toy Do not use this product near flammable and explosive liquids and gases (such as gas stations, filling stations)!

Inflation will produce a high pressure operation of the physical heat phenomenon, please be careful when disassembling the gas pipe

After 10 minutes of continuous use, it is necessary to interval 15 minutes, and then continue to use the machine after cooling to extend the life of the machine.

Q&A

| | The reason/solution |
|--|--|
| Machine failure | ① Check whether the battery is in a low state; ② If the above situation, please charge the battery before use |
| The air pressure display is not accurate | ① Checkwhetherthe connection between the inflation tube joint and the title nazzle is too tight (the department vehicle cannot be connected too tight)s, and the interface can be gradually loosened for testing. ② Check whether the dir pressure unit is corned (the inflation tube can be disconnected from the title inflation tube can be disconnected from the title inflation tube can be disconnected from the pump can be disconnected from the power supply differ 5 seconds, reconnectifie power supply to fer 5 seconds, reconnectifie power supply to perate. |
| The power plug or power cable overheats | ① If the power cord is curied, please completely expand the line: ② If the car power socket is wet and dirty, please wipe it clean and dry; ③ If the working time is too long, please cool it before use. |
| The preset tire pressure only rings once after starting and stops, and the tire pressure display is abnormal | An external tire pressure monitor is installed on the tire air nazzle, and the limit nut of the tire pressure monitor prevents the normal link between the air nazzle of the pump and the tire air nazzle, resulting in the failure of the pump to fill the air. |
| Preset tire pressure starts and stops in seconds | ① The fire air nazzle is equipped with an external fire pressure monitor, and the limit nut of the fire pressure monitor prevents the national link between the air nazzle of the air pump and the wheel of in razzle, resulting in the air pump cannot be filled: ② If the current ambient temperature is below zero, please use a lighter to slightly hear the nazzle of his the before infants. |
| Conversion of inflatable | 100kpa =14.5psl=1kg = 1.01bar The fire pressure of commonly used cars is 2.3-2.5bar |

If you have any other questions, please contact customer service for help

AIR PUMP & EMERGENCY STARTING POWER SUPPLY

TS-03 PRODUCT SPECIFICATION















Tips Please read the instruction manual carefully and use the product correctly according to the Instructions in the operation manual, so that you can get familiar with the product more easily and quickly.