 


Baseus

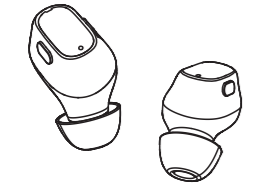

Baseus Encok True Wireless Earphones WM01 Plus Instruction

Please read the instruction manual carefully before using the product and keep it with proper care

1. Product diagram

Double-click touch area

 
Take out the earphones from the charging case/ long press for 3 seconds (L & R earphones): turn on

Music mode:


- Long press left ear 2 second (L): previous song
- Long press right ear 2 second (R): next song
- Double-click the right ear (R): play/pause
- Double-click the light ear(L): activate voice assistant (Siri/Bixby)

Call mode:


- Double-click left and right ear (L or R): answer/hangup
- Long press left and right ear (L or R): reject a call

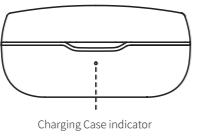



Charging Case indicator

 

Type-C charging port

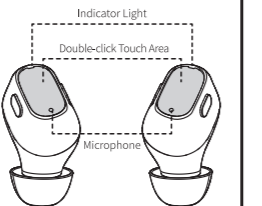 

  The digital display of the charging case: show the battery percentage of the charging case.

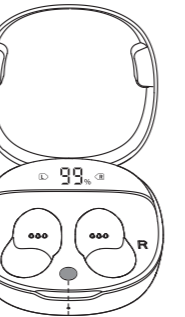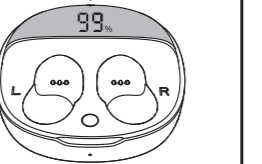


Charging case buttons:

- Without earphones, single press the charging case to show the battery percentage of the charging case.
- With earphones, single press the charging case to show the battery percentage of the charging case, single press again to show the remaining usage time of the left earphone, single press for the third time to show the remaining usage time of the right earphone, single press for the forth time to show the battery percentage of the charging case, and that cycle repeats.

2. Product Parameter


Name: Baseus Encok True Wireless Earphones
Model: Baseus Encok WM01 Plus
Material: ABS
Version: V5.0
Communication distance: 10m
Standby time: 300 hours
Music time: 5 hours (70% of the volume)
Music listening duration with the charging box: 50 hours
Battery capacity: 40mAh/0.148Wh (earphones) 800mAh/1.11Wh (charging box)

 Earphone rated input: DC5V=50mA
Earphone rated consumption current: 8mA
Charging box rated input: DC5V=880mA
Charging box rated consumption current: 96mA
Charging time: 2 hours
Frequency response range: 20Hz-20KHz
Charge interface: Type-C
Suitable for: Compatible with all wireless devices

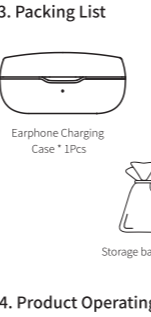

L refers to the remaining usage time of the left earphone.

 R refers to the remaining usage time of the right earphone.

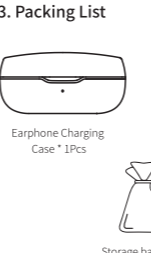

3. Packing List

- Earphone Charging Case * 1Pcs
- Earphones (L&R) * 2Pcs
- Eartips * 4pcs
- Storage bag * 1pcs
- Charging cable * 1Pcs
- User manual * 1Pcs + Warranty card * 1Pcs

4. Product Operating Method

Before using for the first time, please tear off the insulating sticker on the earphone, and then put it in the charging case to charge. After the earphone and charging compartment are fully charged, remove the earphone from the warehouse. The earphone will automatically turn on and wait for a few seconds to see a earphone White light flashes quickly, when a headset's white light flashes slowly, you can open the phone's Wireless search connection to use.

4.1 Function Definitions:

- Start — take out the earphones from the charging case or long press the left and right earphones for 3 seconds to start the pairing between the left and right earphones. After the pairing is successful, when the white light of one earphone flashes quickly and the white light of the other earphone flashes slowly, they enter the two-ear pairing mode. Lastly, turn on the phone's wireless to search the earphones to connect and use.
- Shutdown — put the earphone into the charging case and the earphone will power off automatically. The charging case will charge the earphone automatically.

Music mode:

- Previous song/Next song -- Long press left /right ear 2 second
- Play/Pause -- Long press right ear 2 second (R)
- Activate voice assistant(Siri/Bixby) -- Double-click the light ear(L)

Call mode:

- Answer/Hangup --- Double-click left and right ear (L or R)
- Reject a call --- Long press left and right ear (L or R)

② Single earphone use

- Start-up -- Pick up the earphone from the charging case, turn on the left and right ears to pair automatically, and then enter the two-ear pairing mode.
- Shutdown -- put the earphone into the charging case and the earphone will power off automatically. The charging case will charge the earphone automatically
- Play/Pause/Answer/Hangup -- Double touch the ear

4.2 Restore factory settings

- Turn off the wireless of the surrounding phones. Put the left and right earphones into the charging case, open the lid and take out the two earphones. When the white light of one earphone flashes quickly and the white light of the other earphone flashes slowly, touch left or right earphones three times and then the red light of the earphones flashes once. The earphones are now restored to the factory settings. Put them into the charging case again and then take them out. Lastly, turn on the phone's wireless to search the earphones to reconnect and use.
- Turn off the wireless of the surrounding mobile phones. Take out just one earphone. When the white light flashes quickly, touch the earphone three times and then the red light flashes once. When this earphone is restored to the factory settings, put it into the charging case. Take out the other earphone and repeat the operation. After the two earphones are restored to the factory settings, put them into the charging case and turn on the phone's wireless to search the earphones to reconnect and use.

4.3 Pairing Mode:

- When pairing Wireless for the first time, please make sure the distance between Wireless earphone and mobile phone within 1M.
- Open the charging case and the left and right earphones will automatically power on. The earphone indicator will flash twice -- one quick flash and one slow flash -- and enter dual earphone mode.
- Turn on the Wireless function of the mobile phone, search for Wireless devices, select the device model: Baseus Encok WM01, and click Connect.
- Enter the pairing password "0000" (some mobile phones require password for pairing, while some not)
- Please repeat the above operation after the pairing fails, and the indicator will turn off after the pairing succeeds.
- To switch Wireless devices, the user must first re-enter pairing mode. For specific operations, please refer to the factory reset function.

Note:

- If the headset cannot automatically reconnect, please turn off the phone Wireless, perform factory reset, and then reconnect to the phone Wireless.
- Due to the features of Wireless earphones, electromagnetic waves in your area may interfere with Wireless connection, thus resulting in silence or disconnection.

5. Declaration on Toxic or hazardous substances and elements contained in electronic products

Part Description	Toxic or hazardous substances and elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr VI)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
PCB	X	O	O	O	O	O
Plastic	O	O	O	O	O	O
Metal	X	O	O	O	O	O
Accessory	O	O	O	O	O	O

This form is compiled in accordance with SJ/T 11364.

O: It indicates that the content of the toxic and harmful substance in all homogeneous materials of the component is below the limit specified in GB/T 26572 standard.
X: The content of toxic and harmful substances in at least one homogeneous material of this part exceeds the limit stipulated in GB/T 26572 standard.

Warm Tip: The 5-year icon refers to the "effective life of environmental protection", not the product quality assurance period. Electronic products all contain toxic and harmful substances such as lead, mercury and cadmium. Once they are overused, toxic and harmful substances may leak or mutate, cause pollution to the environment, or cause serious damage to people and property. The term of "environmental protection use" means that all electronic products will be required to use within this effective period. We will no longer be responsible for the quality of the products due to the safety risks that arise after the safe use period.

 
6. Product safety information

Please read all instructions and warnings before using this product. Non-standard use will damage the product or personal safety.

- The battery is included in the product. Please do not expose it to sunlight, fire or similar overheating. Do not store the product in high temperature, strong light and strong magnetic field. Do not place it in other harsh environments such as fire source. If water enters, dry it naturally and use it again.
- Improper use of the product can easily cause damage to the product or may endanger personal and property safety.
- Consumer shall be liable for any personal and property damage resulted from their improper use against the user manual or ignoring the warning, to which our company will not bear any legal liability.
- Disintegration of this product by non-professionals is strictly prohibited.
- Use of household appliances or loads in excess of the output current of this product shall be avoided (no output due to circuit protection).
- Intense physical actions including knocking, throwing, trampling on and squeezing, etc. shall be avoided.

7. FAQs:

- Why product cannot be turned on?
Answer: When using your product at the first time, please check and make sure the product battery is fully charged. If the battery runs out of power, your earphone may not be turned on.
- The earphone is silent during playback?
Answer: Check for a valid connection between the mobile phone, Wireless adapter and your earphone. If the device is not properly connected, please reconnect it. Meanwhile, please also adjust the volume on mobile phone or your earphone to a proper level.
- The mobile phone cannot find the Wireless headset, the Wireless connection is unstable or disconnected from the mobile phone during use, and the sound freezes / intermittent?
Answer: 1) Please do not exceed the distance of the mobile phone's Wireless connection by 10 meters, to avoid interference from the wall or human body;
2) Please make sure the headset has enough power;
3) Press and hold the headset for 10 seconds to turn it off, and then press and hold for about 3 seconds to turn it on. The headset will be reset to factory settings, and then turn on the mobile phone Wireless to search for pairing connections;
4) Please ensure that there are no strong interference signals such as wifi / signal tower / radio frequency
5) If the above operation still fails to connect, please contact customer service
- When there's an incoming call, pick it up from the charging case (or single click) the earphone to answer the call, and the sound is output from the Wireless earphone; Slide from the phone screen to answer, some phone brands will output sounds from the mobile phone, and some from the Wireless earphone?
Answer: Due to the different mobile phone systems, answering incoming calls with the earphone will be output from the Wireless earphone; However, when answering the call by sliding the mobile phone screen, different sound output channels will occur due to different logic processing of the operating systems, which requires the manual switching to the earphone.



This equipment complies with the provisions of Directive 2012/19/EU and Directive 2006/66/EU. It is strictly forbidden to dispose of this equipment with ordinary trash; it must be recycled. This symbol indicates that the product shall not be treated as regular domestic trash, and must be delivered to a recycling center that is capable of recycling electronic and electrical equipment.

It is hereby declared that Baseus Encok WM01 Plus, a product model of Shenzhen Times Innovation Technology Co., Ltd., complies with the provisions of Directive 2014/53/EU, Directive 2011/65/EU. The full text of the EC Declaration of Conformity can be found on the following website:
www.baseus.com



Warning Please follow the above safety instructions otherwise it will cause fire, electric shock, damage or other damage.

Manufacturer: Shenzhen Times Innovation Technology Co., Ltd.
Add: 5th Floor, Building B, Baseus Intelligence Park, No.2008, Xuegang Rd, Gangtuo Community, Bantian Street, Longgang District, Shenzhen
Hotline: +86-4000-712-711 Website: www.baseus.com

PB2595Z
Designed by Baseus
Made in China