



Keyboard Manual

(1) Keyboard Operation

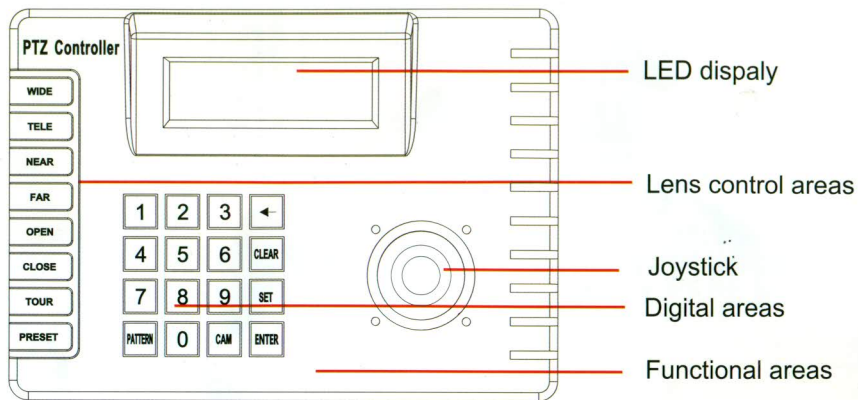

(2) Keyboard connection the dome camera

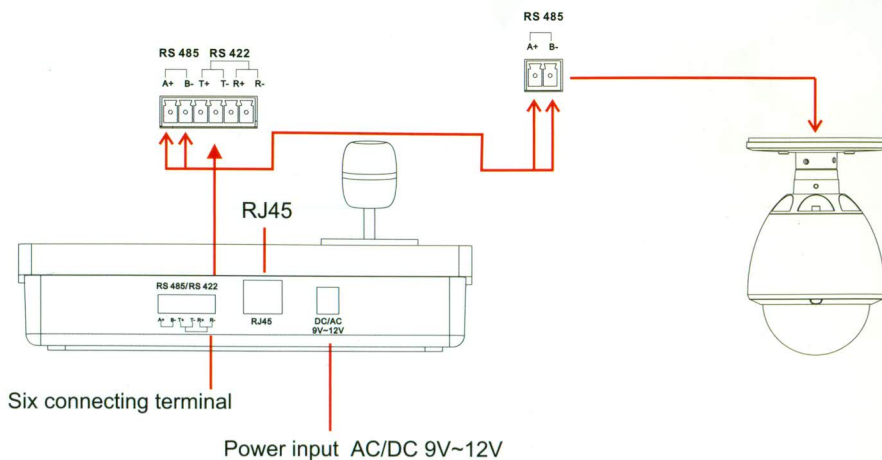

(3) Keyboard instruction

Shortcuts	Function
TELE	Zoom In
WIDE	Zoom Out
FAR	Far Focus
NEAR	Near focus
CLOSE	Iris In
OPEN	Iris Out
SET	Press and hold for 3 seconds to open the keyboard menu
←	Backspace
ENTER	Confirm key
N+CAM	Enter the number of speed dome, press the [CAM] button, select the target ball machine
SET+N	Transferred to the target location of the speed dome, press [SET] button,
+PRESET	enter the preset number [N] and press [PRESET] key, set the preset point
N+PRESET	Enter the preset number [N], press [PRESET] key, call preset points
CLEAR+N	Press [CLEAR+N+PRESET] delete the preset point.
+PRESET	
N+PATTERN	Press [N] [PATTERN] or [PATTERN] start scanning pattern
CLEAR+	Press [CLEAR+PATTERN] or [PATTERN] stop scanning pattern
PATTERN	
N+TOUR	Press [N][TOUR] or [TOUR] start cruise .
CLEAR+TOUR	Press [CLEAR+TOUR] stop cruise .