

CLMD-2018 VIBRATION SENSOR MANUAL

1.Appearance



2.Features

CLMD-2018 8 vibration sensor has nice appearance, simple operation, easy to installed and strong applicability, can send out alarm signal accurately, as well as monitor violent acts effectively. Pulse counting can be adjustment.


3.Specifications

Model: **CLMD-2018**
 Working Environment: $-5^{\circ}\text{C} \sim 50^{\circ}\text{C}$
 Signal: 150m (inopenarca)

Working voltage: 3V
 Alarm: vibration
 Working current: $\leq 10 \mu\text{A}$



4.Installation

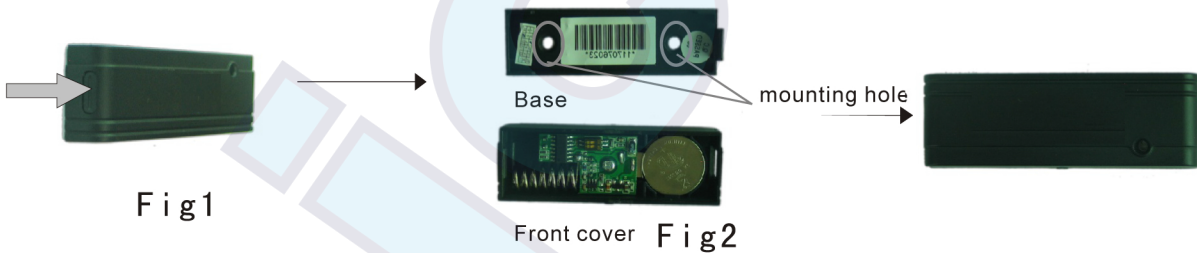

① Open the front cover by pressing the tap as arrow.

② Attach the base to the wall

③ Replace the cover

5.Dip switch



dip switch

Sensibility adjustment

level 1--Maximum sensibility SW-2 off SW-1 off

level 2--level 2 SW-2 on SW-1 off

level 3--level 3 SW-2 off SW-1 on

level 4--minimum sensibility SW-2 on SW-1 on

